Bauknecht

- **Operating Instructions**
  Automatic Washing Machines

Page 24

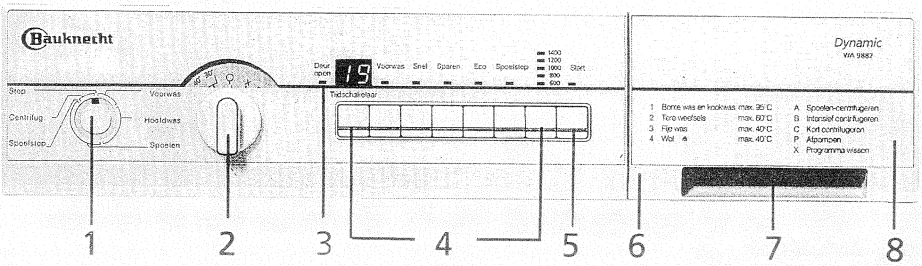
Bauknecht
Dynamic
WA 9887
Stop
Centrifug
Spoelstop
Voorwas
Hoofdwas
Spoelen
Deur open
Voorwas
Snel
Sparen
Eco
Spoelstop
Start
1400
1200
1000
800
600
Tijdschakelaar
1 Bonne was en kookwas max. 95°C
2 Tere weefsels max. 60°C
3 Fijn was max. 40°C
4 Wol max. 40°C
A Spoelen-centrifugeren
B Intensief centrifugeren
C Kort centrifugeren
P Afpompen
X Programma wissen
1
2
3
4
5
6
7
8

1

1
2
3
4
5
6

2

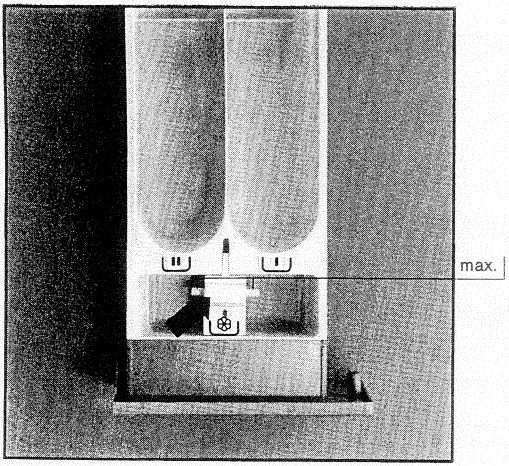

3

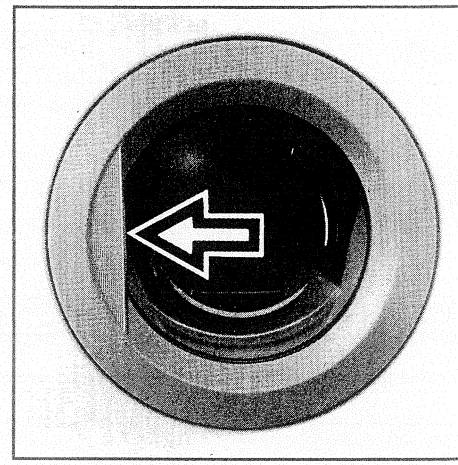

4

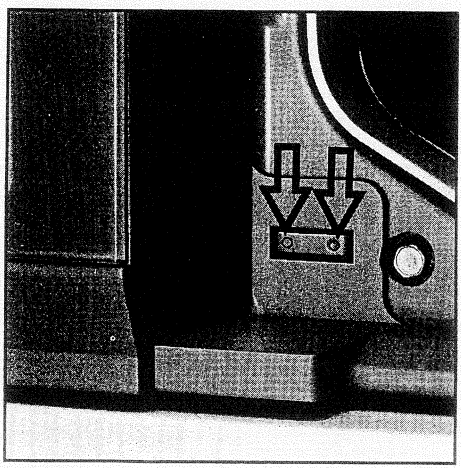

5

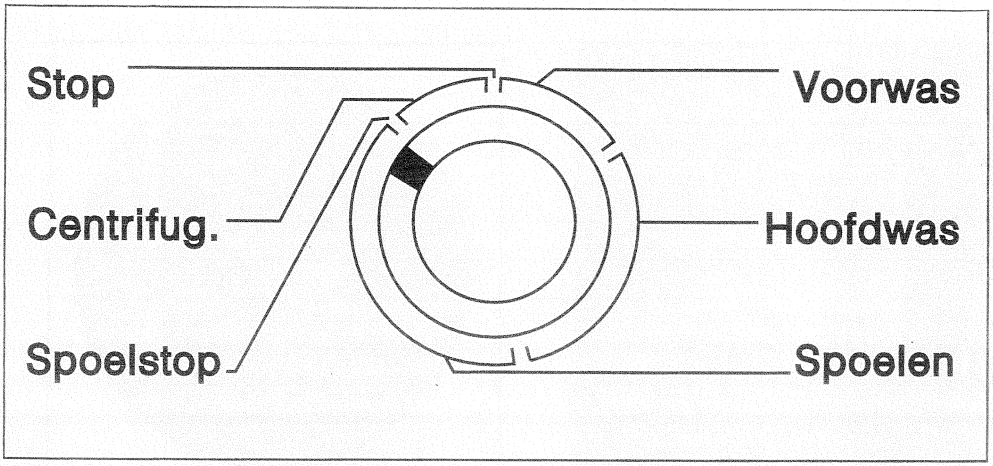
Stop
Voorwas
Centrifug.
Hoofdwas
Spoelstop
Spoelen

⑥

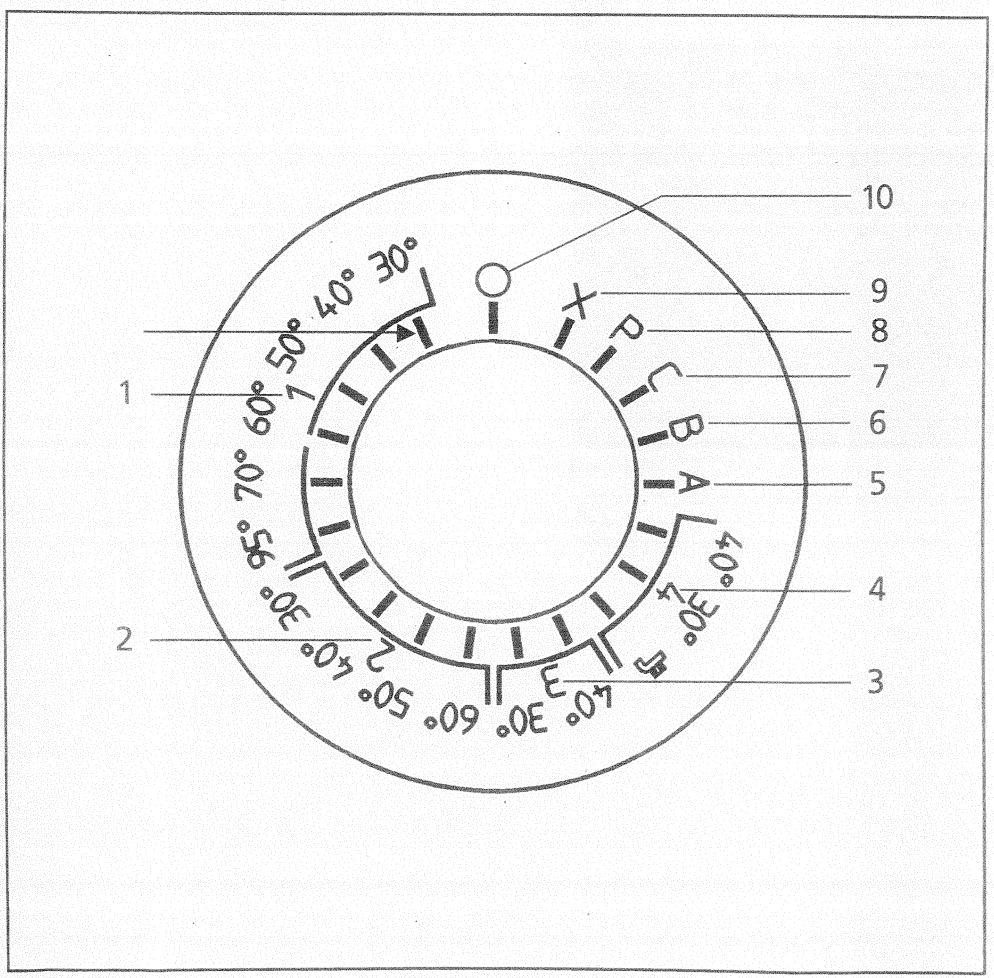
10
9
8
7
6
5
4
3
1
2
30°
40°
50°
60°
70°
95°
X
P
C
B
A
E
40°
30°
60°
50°
40°
30°
95°
70°
60°
50°
40°
30°

⑦

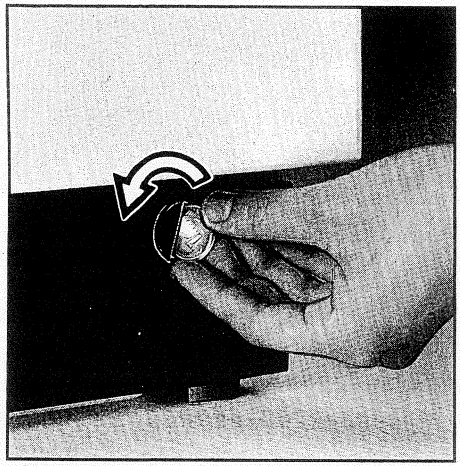

8

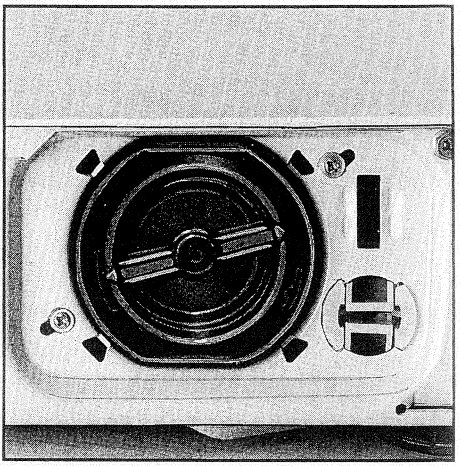

9

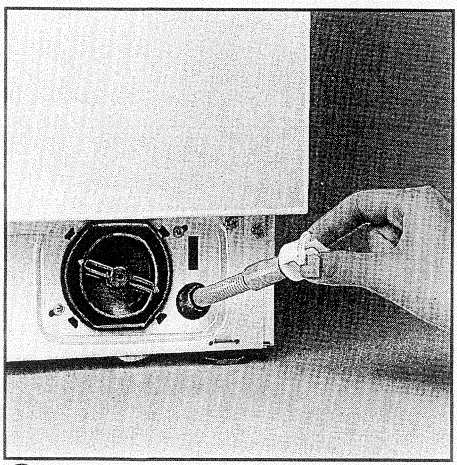

10

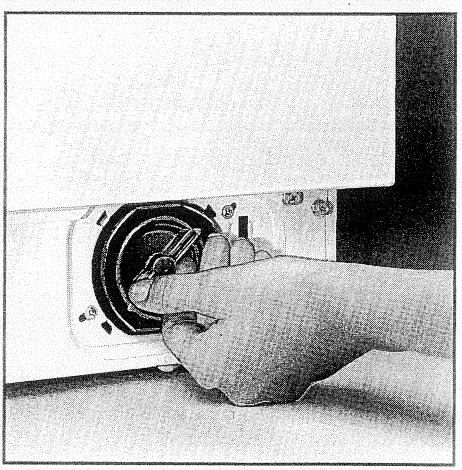

11

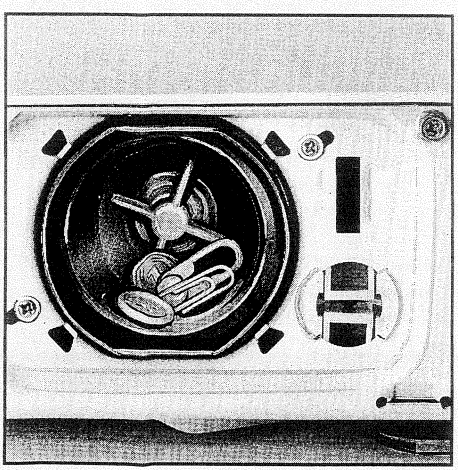

12

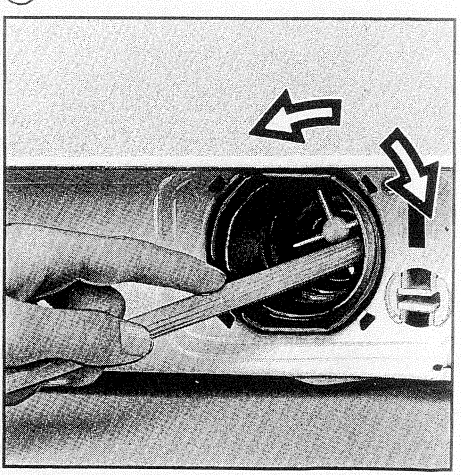

13

Congratulations!

In selecting an automatic washing machine you have opted for an appliance that combines the most sophisticated technology with ease of use.

Your new appliance was manufactured using all that modern technology has to offer making a genuine contribution to the cleanliness of your wash.

It is economical in its water and electricity consumption and when used thoughtfully can help you to help the environment.

We recommend that you read these instructions carefully so that you quickly become familiar with your new appliance.

Treated with care, it will give you many years of reliable service.

Protect the environment!

Packaging materials

Take recyclable packaging materials to the nearest collection point.

Appliance

Before being scrapped, appliances must be rendered unusable by cutting off the power supply cable at the appliance. Remove the door lock or render it unusable to prevent children being locked inside. Ensure that the appliance is disposed of properly and safely.

Warning

Before using your appliance, please read the instructions carefully. They contain important information about the installation, use and care of your appliance.

Please keep these instructions in a safe place for future use.

The manufacturers cannot be held responsible for any injury or damage to persons or property if the following instructions are not observed:

1. When using this appliance or indeed any electrical appliance you must respect basic safety rules. In particular:
   – do not touch or operate the appliance with wet hands, when barefoot, or when standing on a wet surface.
   – to unplug the appliance pull the plug itself, not the cable.
   – do not expose the appliance to the weather (rain, sun, etc.).
   – do not allow children or disabled persons to operate the appliance unaided.
2. After unpacking the appliance, make sure it is complete and undamaged. In case of doubt, do not use the appliance and call a qualified technician or contact our customer services department.
   Packaging materials such as plastic bags, polystyrene, nails, etc. must be stored out of reach of children as they are potentially hazardous.
3. Only use the appliance for domestic ends and for its intended purpose.
4. Installation must be carried out by a qualified technician and in accordance with the manufacturer's instructions (see separate Installation Instructions).
   Before connecting up the appliance, make sure that the data shown on the name plate (voltage, etc.) corresponds to the appropriate data for your house.
   It is imperative that fundamental safety requirements be observed. In case of doubt,

the house wiring must be carefully inspected by a qualified electrician.
The appliance is only electrically safe if it is correctly installed and earthed as prescribed in the relevant safety standards for electrical connections. If the type of socket in your home does not match the type of plug on the appliance, we recommend having the socket replaced by a qualified electrician.
In general, the use of adaptors, multiple sockets or extension cables is not recommended.

5. Before any cleaning or maintenance operation is carried out, disconnect the appliance from the mains by pulling the plug or switching off the electricity at the mains.
6. Do not leave the appliance switched on unnecessarily. Switch off at the mains switch and turn off at the tap.
7. In the event of a malfunction or if a fault is detected disconnect the appliance from the mains and turn off at the tap.
Repairs should only be carried out by a qualified technician or by our customer services department. Use original spare parts only.
8. Store detergents, fabric conditioner and other materials in a cool, dry place out of reach of children.
9. Do not let children play with or in the washing machine.
10. Only use mains water or filtered rain water and normal domestic detergents suitable for automatic washing machines. When using water-softening or decalcifying agents or dyes and bleaches, make sure they are recommended for use in washing machines in the instructions supplied by the manufacturer.
11. Never put in a washing machine any articles which have been dry-cleaned, washed, soaked or sprayed with wax, dye, petrol or other inflammable liquids. The vapour may cause fire or explosion. Always wash any articles which contain these materials by hand first and allow them to dry naturally in the open air.
12. Do not use any solvents (such as turpentine or white spirit) in the appliance.
13. In order to ensure stability, built-under and integrated models may only be installed under a continuous worktop which is screwed to adjacent units.
14. Do not use the glass port hole or the door of the appliance as a step or place heavy items on them.
15. Do not reach inside the drum while it is rotating.
16. Improper forcible opening of the glass door or filter may lead to scalding or flooding.

Contents

page

Your Washing Machine 27

Important advice

Protect the enviroment 24
Warning 24/25
Eco-tips 29
Hints on stain removal 32/33
Energy and water consumption figures 40/41
Noise 44

Washing tips

Before using the appliance 28
Preparing the wash 28
Load capacity 29
Adding detergent 30
Types of detergent 30
Water Hardness 30
How much detergent to use 31
Softeners and starch 32
Water softening 32
Special treatment 32
Opening and closing the door 33
Loading the washing machine 33
Door lock 33

Operating

Programme/temperature selection 33
Temperature/programme change 33
Special functions 34
Auxiliary switch for suds cooling and intensified rinse 35
Programme start 36
Programme sequence indicator 36
Error display 36
Programme end 36
Programme summary – main programmes 38/39
Programme summary – special programmes 40/41

page

Care and maintenance

Cleaning the filter and emergency draining 42
Care and maintenance 42/43
Location in a room where frost may occur 43

Trouble-shooting

Dealing with minor problems 43/44
Motor protection 44
Breakdown – now what? 45

These instructions apply to several different appliances. Certain details may vary according to the type of appliance.

Your Washing Machine

Control panel

Figure ①

1. Programme sequence indicator
2. Programme/temperature selector with programme indicator scale above
3. "Door released" display
4. Special function buttons
5. Start button
6. Auxiliary switch for suds cooling and intensified rinse (not shown)
7. Grip for detergent dispenser
8. Programmes

Front view

Figure ②

1. Worktop
2. Loading door
3. Door handle with release button
4. Four adjustable feet (at front and back)
5. Emergency drain hose and filter behind plinth (not shown)
6. Removable plinth

Before using the appliance

Figure ③

There may still be traces of grease and a small amount of water from test runs in the drum. To remove these we recommend that you run the machine once with no washing in. Select a coloured wash at 40 °C or 60 °C and with no prewash.

Use approx. 100 ml of detergent in dispenser compartment II.

Turn on the tap. With the programme/temperature selector, select the desired programme and the desired temperature. Start the machine by pressing the start button.

The water inlet automatically adjusts itself to the size of the wash load and the type of fabric being washed. Perfect washing and rinsing results are obtained using singificantly less water. This is why you will see noticeably less water in the drum during the washing cycle than you would expect to see with older-type appliances.

Preparing the wash

Sorting the wash

Sort the wash according to type of fabric (cotton, easycares, wool 🐑) and wash temperature. Note the instructions on the care labels. Separate whites and coloureds. Whenever possible put articles of different sizes but of the same fabric type and degree of soiling together in the same load. For more detailed information see the programme summary.

In order to avoid damage to the washing, make sure there are no paper clips, hair grips, nails, coins, safety pins, etc. left in the clothes.

Net curtains

Net curtains require very careful treatment. They can easily be damaged when taking them down.

Curtain hooks should either be removed or grouped together and tied in a net or bag.

We cannot be held liable for any damage to curtains during washing.

New items

Coloured textiles often include excess dye which can run into lighter clothes during washing. We recommend washing new coloured items separately the first time.

Load capacity

Cottons

average/lightly soiled	max. 5.0 kg
heavily soiled	max. 4.0 kg
Easycares	max. 2.5 kg
Delicates	max. 1.5 kg
Woollens	max. 1.0 kg

Maximum efficiency is reached by using the full capacity of the washing machine but without overloading it.

Washing weights

Article	approx. weight (g)
Bathrobe	1200
Overalls	400–600
Quilt cover	700–1000
Sheet	500–700
Blouse	100
Bath towel	800
Hand towel	150-200
Tea towel	100
Shirt	200
Vest	100
Underwear	50
Pillowcase	200
Pyjamas	450
Napkin	50–100
Handkerchief	20
Medium tablecloth	400

The weights given are for items made of cotton or linen.

Eco-tips

– how to help both your purse and the environment!

1. Use the maximum load for efficient use of water and electricity
2. For items that are average/lightly soiled use an energy-saver programme such as 60 °C instead of 95 °C for coloureds.
3. There is no need for a prewash when washing average/lightly soiled items.
4. Emergency draining empties all the water out of the machine. When you have refitted the filter, we recommend pouring half a litre (about a pint) of water into the detergent dispenser. This way, the eco-system will function immediately you restart, avoiding any waste of detergent in the following wash and helping to improve the results.
5. Follow the detergent manufacturers' dosage instructions. For part loads, we recommend using ¾ of the normal amount for half loads and half the normal amount for less (approx. 1 kg).
6. Use colour or component detergents without bleaching components. Only add the bleaching component if absolutely necessary (ground-in stains, whites).

Adding detergent

Figure ③

Detergents should be put into the dispenser compartments before starting a programme.

The dispenser is located on the right-hand side of the control panel.

Put detergent for the **prewash** in the **right-hand compartment** I and for the **main wash** in the **left-hand compartment** II.

The **front compartment** ❄ is for **softeners, starch, etc.** for the rinse phase.

Separate addition of bleaching components or stain-removing salt is into the right compartment I. Addition is only possible in programmes 1 and 2 without prewash.

Close the dispenser firmly.

All detergents, softeners, etc. will be dispensed automatically at the correct time.

Types of detergent

The choice of detergent depends on the type of fabric (synthetic, cotton, wool, etc.) the colour, wash temperature and degree of soiling.

In this washing machine all normal and special detergents recommended for automatic washing machines can be used.

- powder for all types of fabric
- powder for delicate fabrics for the easycares and woollens programmes (max. 60 °C)
- Powder-type bleaching components or stain-removing salt, preferably for wash programmes without prewash in combination with colour or component detergents for all types of fabric except delicate items and woollens.
- liquid detergent for all types of fabric but especially woollens are best used for low temperature programmes (max. 60 °C) with no prewash.

Water Hardness

Range	Classification	Hardness (UK) deg Clarke
1	soft	0– 9
2	medium	–17
3	hard	–26
4	very hard	> 26

How much detergent to use

This fully automatic washing machine has been designed to take account of the latest environmental advances in modern washing machine technology.

The type and quantity of detergent required depends on the type of fabric, size of load, level of soiling and also the water hardness.

The quality of water has been classified by water hardness range (see water hardness table).

Information about the degree of hardness of your water supply can be obtained from the local water board or council.

You will find the recommended amounts of detergent for the various hardness ranges listed on the detergent packets.

Washing powder

We recommend the following amounts:
For a full load: amount recommended by detergent manufacturer.

For a half load: ¾ of the recommended amount.

For small loads (approx. 1 kg): ½ the recommended amount.

Powder-type bleaching components or stain-removing salt

Figure ③

In order to optimize the wash performance, it is beneficial to add these agents separately into chamber I. Follow manufacturer's dosage instructions.

Liquid detergent

Figure ③

The amount recommended by the manufacturer should be put **directly in compartment II** (main wash only).

Note:

Excessive amounts of detergent cause excess suds and may cause overflowing. Excess suds are detrimental to the washing process and also cause unnecessary pollution.

Too little detergent causes whites to turn grey and calcium deposits to build up on the heating element and on the outside of the drum.

When a programme ends, dark textiles in particular may show white detergent residues. This is not due to inadequate rinsing but to the insoluble water-softening agents used in modern phosphate-free detergents.

The white specks can normally be shaken or brushed off, but to avoid them occurring, try a different washing powder or use liquid detergent.

Due to modern detergents (powder or liquid) some foam may be seen during the final rinse or when spinning. This does not make the rinse any less effective.

Particularly in machines with timers, the detergent dispenser should be rubbed dry before adding the detergent, in order to prevent the detergent sticking to the dispenser as a result of the longer standing time of the machine.

Softeners and starch

Figure ③

All products suitable for automatic washing machines can be used. Observe manufacturer's recommendations for a water volume of approx. 15 litres.

Fill the front compartment ❀ of the detergent dispenser no further than the **„max"** mark, otherwise the product will be dispensed too soon and not have the desired effect.

A special programme is available for starching (see „Programme summary").

Larger quantities of starch should be used in a diluted, liquid form in accordance with the manufacturer's instructions and placed in the left-hand dispenser compartment II before starting the programme.

Water softening

If your water is hard (range 3 or 4) we recommend using a water-softening agent. Please follow the manufacturer's instructions precisely.

When using a water-softener, reduce the amount of detergent used to that required for range 1.

Very soft water can cause excessive foam. This can be prevented by adding a foam-reducing agent to the detergent.

Special treatment

Dyeing and bleaching

Dyes and bleaches may only be used in a washing machine when explicitly recommended in the dye/bleach manufacturer's instructions.

These instructions must be strictly observed.

Bauknecht cannot be held responsible for any damage or injury caused if these instructions are not observed.

Hints on stain removal

Important!

Rinse out stains with soap and warm water **immediately**. Old stains are far harder to remove. Work on a clean absorbent surface and dab the stains, do not rub them. Bleaches and certain stain removers are very aggressive, try them out first at a less visible point (on a hem or inside seam).

Be careful when using bleach!

- Poisonous vapours may be given off and the sulphur dioxide content may damage the washing machine.
- Do not breathe in large amounts of solvents. This is extremely detrimental to your health.
- Take extreme care with inflammable stain removers (there is a risk of explosion!). Hand wash any fabrics you have treated with stain remover and allow them to dry in the open air.
- Keep all stain removers locked away out of reach of children (stain removers are poisonous!).

Blood
Treat with cold water and soap

Paint, felt-tip, ball-point
Use alcohol or glycerine

Grease
Treat with liquid detergent

Grass
Use alcohol or methylated spirit. For stubborn stains use a biological stain-removing additive in the main wash.

Coffee, tea
Use glycerine. Wash out in lukewarm water.

Cocoa
Soak in biological detergent before washing.

Glue
Treat with acetone or nail-varnish remover. Always wash out treated fabrics by hand.

Fruit, red wine
Use a biological stain-removing additive in the main wash.

Cosmetics
Use alcohol or methylated spirit. For stubborn stains use a biological stain-removing additive in the main wash.

Mildew

Dissolves in the wash. For stubborn stains, soak in biological detergent before washing or use a biological stain-removing additive in the main wash.

Tar

Soften with butter before treating with liquid detergent or alcohol.

Opening and closing the door

Figure ④

Press the release catch to the left and pull the door towards you. After loading swing the door shut or press it home until the catch is heard to click into place. The machine will only run if the door is closed properly.

Loading the washing machine

Unfold the washing and load it loosely into the drum. Wash a mixture of large and small items whenever possible.

Do not exceed maximum load weights.

If a single heavy item such as a bathrobe is to be washed, vibration may result and the machine may not run as smoothly as usual. This will not affect the performance of your appliance.

Loading additional washing

In programmes 1 and 2 additional washing can be loaded in the main wash without problem for as long as the "Door released" display is lit up (approx. 12 minutes).

In programmes with prewash, additional washing cannot be loaded while the prewash is in progress.

Door lock

After switching on and starting the required programme the door remains locked thermoelectrically throughout the entire programme. (Exception: Programmes 1 and 2 during the first 12 minutes of the main wash).

This is also the case if the "Rinse and hold" special function has been selected. The end of the programme is indicated on the sequence indicator by the "Door released" display (Figure ①/3). The door is no longer locked.

Programme/temperature selection

Figure ①/2 and ⑦

You can choose between various main and special programmes.

The required temperatures for effective washing are assigned to each main programme.

Thus the wash programme and wash temperature can be conveniently selected with one selector.

To select a programme, turn the programme/temperature selector in any direction until the line below the required temperature of the corresponding programme area (see Figure ⑦, blue arrow) is in line with the mark in the viewing window.

The programme indicator scale above the programme/temperature selector lights up.

Figure ⑦

1 = Coloureds/cottons	30 . . . 95 °C
2 = Easycares	30 . . . 60 °C
3 = Delicates	30 . . . 40 °C
4 = Woollens	🚰 . . . 40 °C
5 = Rinse/spin	
6 = Fast spin	
7 = Short spin	
8 = Drain	
9 = Cancel	
10 = Position O	

🚰 = Cold; water inlet temperature

Temperature/programme change

Figure ①/2

The temperature or programme selection can be changed at any time while a wash programme is running. The machine stops at the current programme stage and, when the programme is restarted, begins from the next possible stage of the new programme selected by you.

Temperature change

- Set the programme/temperature selector to the desired temperature
- The indicator lamp above the Start button begins to flash
- Restart the machine by pressing the Start button

Programme change

- Set the programme/temperature selector to the desired programme and the desired temperature
- The indicator lamp above the Start button begins to flash
- Reselect special functions required
- Restart the machine by pressing the Start button

Special functions

Figure ①/4

The range of programmes on this appliance can be extended by a number of useful special functions which vary from one model to the next.

When the relevant button is pressed the indicator lamp above it lights up and the selected special function becomes active.

If you select an incorrect combination of special functions or of special functions and programmes, the indicator lamp above the button does not light up or goes out again. The special function is not activated or is cancelled.

By pressing the button again the selected special function can be cancelled.

The indicator lamps above the selected special functions remain lit when the programme has ended.

They only go out when the programme/temperature selector has been set to position "X".

Timer presetting (if fitted)

With the timer the machine can be preset to start programmes between 1 and 19 hours in advance.

To preset the timer, either hold the timer button down or keep pressing repeatedly (each press advances the timer one hour) until the desired number of hours appears on the timer indicator (number of hours = time until programme start).

If the maximum 19 hours have been reached the display disappears when the timer button is pressed again.

Programme selection with timer

- Set the programme/temperature selector to the desired programme and the desired temperature
- Select the special functions required
- Select the desired number of hours with the timer
- Press the Start button so that the machine is ready to start when the desired time is reached

The selected programme runs automatically when the preset time has been reached. The time remaining until the programme is due to start is shown in hourly stages on the timer indicator.

The number of hours entered can be reduced or cancelled at any time by pressing the timer button.

Prewash

This special function can be selected in programmes 1 to 3, but not in conjunction with the Rapid function.

The prewash should be selected for particularly heavily soiled washing (e.g. with sand or coarse dirt). It lasts approximately 15 minutes.

Rapid

This special function can be selected for lightly soiled washing in all 4 programmes.

The programme duration is significantly reduced and the wash temperature is restricted to a maximum of 60 °C.

The following load weights should not be exceeded:

- Coloureds/cottons	3.0 kg
- Easycares	1.5 kg
- Delicates	1.5 kg
- Woollens	1.0 kg

The Rapid washing function has priority over all other special functions (except "Rinse and hold" and "Spin speed reduction"). Any special functions which have already been selected are cancelled.

Economy

In programmes 1 to 3 the post-wash time is shortened and the volume of rinse water is significantly reduced. Use of this function is beneficial when using smaller quantities of detergent, i.e. for lightly soiled washing or for partial wash loads.

Eco e

This special function can be selected in programmes 1 to 3.

Depending on the type of fabric, the post-wash time in the main wash is extended.

Thus for lightly to medium soiled washing, even if a lower temperature is selected (e.g. 60 °C instead of 95 °C or 40 °C instead of 60 °C) good wash results are achieved. In this way you can save up to 40 % of your energy costs.

For heavily soiled washing or ground-in stains, a more intensive wash performance can additionally be achieved without reducing the temperature.

Rinse and hold

This special function can be selected in any programme.

The washing is left lying in the remaining rinse water. This prevents discolouring of the washing and creasing. The door remains locked as long as the machine is switched on.

This special function should be selected for woollens and synthetics if the textiles are to remain for a time in the machine after the end of the programme.

The relevant programme can be ended
- by pressing the Rinse and hold button. The indicator lamp above the button goes out. Coloureds/cottons, easycares, delicates and woollens are spun automatically according to the type of fabric. If required, the final spin speed can be reduced further;
- or by setting the spin programmes B, C or the programme P "Drain".

Spin speed reduction

This special function is used to reduce the final spin speed.

When the programme has been selected the corresponding spin speed display automatically shows the maximum final spin speed assigned to the selected programme.

The final spin speed can be changed at any time during the wash:
- By pressing the button the spin speed is reduced in stages of 200 rpm.
- As soon as the lowest spin speed has been reached the display automatically jumps to the maximum final spin speed.

Auxiliary switch for suds cooling and intensified rinse

Figure ⑥

Your machine is set up for economical water consumption.

Nevertheless, it may be necessary under certain circumstances to cool the washing suds somewhat, or to increase the water level during rinsing, using this switch.

The auxiliary switch is located behind the detergent compartment at the bottom left, and can be operated when the compartment is pulled out by pressing in with any object (e.g. a pencil).

The auxiliary switch has three positions:

1. Auxiliary switch in centre position	No function
2. Auxiliary switch pushed to left/blue marking	With suds cooling
3. Auxiliary switch pushed to right/red marking	With suds cooling and additional water level increase during rinsing

Suds cooling for coloureds/cottons

To protect old waste water pipes, the main wash suds in the coloureds/cottons wash programmes can be diluted with additional cold water before being pumped out. This cools the temperature of the suds to below 60 °C in all cases.

In programme 2 the suds are automatically cooled to a temperature below 35 °C. This greatly reduces creasing of blended fabrics and synthetics.

Suds cooling and intensified rinsing

In areas with extremely soft water optimum rinsing is guaranteed by the increased water level during rinsing.

Programme start

Figure ①/5

Turn on the tap.

When you have selected the wash programme and wash temperature, switch on the machine by pressing the Start button ◈.
The indicator lamp above the Start button lights up.

Programme sequence indicator

Figure ⑥

The programme sequence indicator is located on the left adjacent to the programme selector.

The current programme status is displayed by markings running round the dial.

Error display

Figure ①/4

The reason why your machine is not functioning properly may often be a minor error in operation.
To avoid immediately having to call our Customer Service in such cases, the timer indicator displays operating errors and malfunctions by means of various letters which appear; you can usually check and rectify these errors or malfunctions yourself:

The letters have the following meanings:

H = The tap is not turned on
P = The pump is clogged (see "Dealing with minor problems")
A = The waterstop has been activated (see "Dealing with minor problems")
E = Only if this display appears do you need to contact Customer Service

If one of these faults occurs, you should stop the current wash programme by setting the Cancel programme **"X"**.

Note: Depending on the equipment level of the machine, operating errors or malfunctions are additionally signalled by flashing of the indicator lamps above the auxiliary buttons.

Rectify the fault and reselect your programme as required.

Programme end

When a wash programme has ended the programme sequence indicator (Figure ⑥) is at the "End" position.
At the same time a single acoustic programme end signal is heard and the "Door released" display (Figure ①/3) lights up.
The door can now be opened and the washing removed.

The machine is switched off by setting the programme/temperature selector (Figure ①/2) to the position O (Figure ⑦).

The indicator lamps above the selected special functions and above the Start button, and the programme scale illumination, go out.

Note

Leave the door slightly open after washing so that the machine can air and the drum dry out.

Turn off the tap.

Programme summary – main programmes

Programme	Items, fabric, degree of soiling	Wash load max.	Pro-gramme no.	Recommended temperature range °C
Coloureds/ cottons	Averagely to lightly soiled cotton or linen bedding, table coverings and underwear, towels, shirts etc.	Normal 5.0 kg Rapid 3.0 kg	**1**	30 to 95
Easycares	Averagely to lightly soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends of those fabrics with cotton	Normal 2.5 kg Rapid 1.5 kg	**2**	30 to 60
Delicates	Net curtains and delicate dresses, skirts, shirts and blouses	1.5 kg	**3**	30 to 40
Woollens	Only items bearing the "Pure new wool" sign and shown on the label to be machine washable	1.0 kg	**4**	to 40

Programmes with prewash last approx. 15 minutes longer.

= Cold; water inlet temperature

etergent ompartment	Optional special functions	Maximum spin speed	Notes
	Timer presetting Prewash Rapid Economy Eco Rinse and hold Spin speed reduction	Maximum speed of machine	With heavily soiled washing the special function "Prewash" may be additionally selected. The combination of the "Rapid" function with other special functions (except "Rinse and hold", "Spin speed reduction" and "Timer presetting") is of no benefit (see "Special functions").
	Timer presetting Prewash Rapid Economy Eco Rinse and hold Spin speed reduction	1000 rpm	With heavily soiled washing the special function "Prewash" may be additionally selected. The combination of the "Rapid" function with other special functions (except "Rinse and hold", "Spin speed reduction" and "Timer presetting") is of no benefit (see "Special functions").
	Timer presetting Prewash Rapid Economy Eco Rinse and hold Spin speed reduction	1000 rpm	With heavily soiled washing the special function "Prewash" may be additionally selected. The combination of the "Rapid" function with other special functions (except "Rinse and hold", "Spin speed reduction" and "Timer presetting") is of no benefit (see "Special functions").
	Timer presetting Rapid Rinse and hold Spin speed reduction	1000 rpm	The special function "Prewash" cannot be selected in the Woollens programme.

Programme summary – special programmes

Programme	Wash load max.*	Programme setting	Detergent compartment
Rinse/spin	5 kg	**A**	In line with starch manufacturer's instructions, when larger amounts of starch are used these must be in dissolved liquid form (liquid starch or starch solution) and should be put into the left compartment ⊔ of the detergent dispenser before running programme A.
Fast spin	5 kg	**B**	
Short spin	5 kg	**C**	
Drain	5 kg	**P**	
Cancel		**X**	

Energy and water consumption figures*

(to help you select the right programme)

Programme	Temperature °C	Programme setting	Special functions
Cottons	95	1	
Cottons	70	1	Economy
Coloureds	60	1	
Coloureds	60	1	Economy
Coloureds	40	1	
Easycares	60	2	
Easycares	40	2	
Delicates	40	3	
Woollens	30	4	

* Consumption figures may vary depending on such factors as mains voltage, connected load, water pressure, type and weight of load.
At a connected load of 2200 W instead of 3200 W, the programme duration is increased, e. g. in the Coloureds programme 60 hC by approx. 8 minutes.

Optional special functions	Notes
Spin speed reduction Rinse and hold Economy	This programme consists of one rinse ending with a short spin.
Spin speed reduction	Untangle spin plus 5 minute final spin
Spin speed reduction	Short spin for hand-washed items. Can also be run to end the synthetics programme.
	Only drain – no spin. Can also be run to end the synthetics, delicate items and woollens programmes or when a programme is interrupted and washing has to be taken out.
	To stop a programme in mid-run (see "Error display"), to terminate a programme or to cancel special functions.

Load kg	Energy comsumption kwH	Water consumption litres	Programme duration minutes
5	1.8	55	98
5	1.4	48	88
5	1.1	55	110
2.5	0.9	38	83
5	0.55	55	100
2.5	0.8	53	85
2.5	0.5	53	75
1.5	0.7	66	57
1	0.5	66	48

If "with prewash" is selected, water consumption rises by approx. 7 litres, energy consumption by approx. 0.4 kWh, and programme duration by approx. 15 minutes.

Emergency Draining/ Removing the Foreign Body filter

Figure ⑧

Removing the plinth

Warning! Before removing the plinth, disconnect the appliance from the power supply by pulling out the plug. Using a coin, turn both locks (left and right) anti-clockwise through about 90 °.

Lift the plinth upwards so the four tabs on the back do not break off.

Figure ⑨

The filter is located on the right-hand side behind the plinth, as are the drain pump and emergency drain hose.

Figure ⑩

Before removing the filter you must first drain off the remaining water via the emergency drain hose located to the right of the filter. Squeeze the plug on the end of the hose lightly and pull out about 300 mm (12").

Now pull the plug out of the end of the hose and drain off the water into a bucket, angled as shown, until no more water comes out. Replug the hose and push it back into place.

Figure ⑪

Before removing the filter, place an absorbent cloth on the floor to soak up the residual water (max. 10 ml). Turn the filter anti-clockwise and wait until the water has drained out. Then turn the filter in an anti-clockwise direction until it audibly detaches, then remove it.

Figure ⑫

Clean the filter and the drain pump impeller. Remove any foreign bodies or fluff from the filter and/or drain pump.

Figure ⑬

The pump is in full working order when the impeller can be moved freely once again.

Replace in reverse order, taking care to locate the filter correctly.

To reactivate the eco-system, please pour 0.5 litres (about 1 pint) of water into the detergent dispenser.

Replacing the plinth

Lower the four tabs on the back of the plinth into their sockets and turn both locks (left and right) clockwise through about 90 °.

Emergency draining

Warning! Allow the suds or water in the machine to cool before draining off through the emergency drain hose. If this procedure is not followed the door will not open.

The door has a thermo-electric lock.

End programmes with programme **"X"**. The loading door can then be opened.

Care and maintenance

The washing machine requires no special care. However, the following points should be checked occasionally.

The detergent dispenser

Figure ③

Any residues left in the dispenser can be washed out easily. Pull the dispenser out as far as possible then give it a sharp tug to remove it from the appliance completely. Both the dispenser itself and the siphon (see arrow) can be cleaned easily under running water.

Be sure to refit the siphon correctly into place. Press the siphon down until it stops then refit the dispenser and close it fully.

The dirt sieve

The dirt sieve is located at the tap end of the inlet hose (see "Water inlet" section in the separate Installation Instructions). The sieve can become clogged with dirt or rust with the result that – even at normal pressure – water flows into the machine too slowly, which in turn interferes with the programme sequence. The sieve should therefore be cleaned from time to time.

The drum

The drum is made of stainless steel. Rust from paper clips or nails left in the machine may however accumulate in the drum and must be removed using a non-abrasive scourer. The rubber gasket should also be cleared of any foreign bodies. After removing your washing from the machine leave the door slightly open to allow the machine to air and the drum to dry out.

The door seal

The door seal can be wiped clean from time to time with a damp cloth to remove any detergent or fluff.

The housing

The housing is painted and can be cleaned with a damp cloth and washing-up liquid or a mild cleanser (do not use abrasive cleansers) and polished with a dry cloth.

The control panel

This should also be cleaned with a damp cloth and washing-up liquid or a mild cleanser (do not use abrasive cleansers) and polished with a dry cloth.

Location in a room where frost may occur

If the appliance has been installed in a room where frost may occur, residual water must be drained in the cold season (see „Emergency draining") once the day's washing is finished. The inlet hose should be unscrewed from the tap and drained completely. If the drain hose is looped it must also be drained.

At temperatures below 0 °C carefully (and **with the machine door closed – danger of scalding!**) pour hot water into the detergent dispenser to ensure the siphon is free of ice (you cannot tell just by looking into the dispenser) before running a programme.

Only when the hot water has run off – check by pulling out the dispenser completely – can the required programme be set and run (danger of flooding).

Dealing with minor problems

No water when you switch on

- Is the tap turned on (error display "H")?
- Is the washing machine plugged in properly?
- Is the door firmly closed?
- Have you switched on by pressing the on-off button?
- Has a fuse blown?

Not much water when you switch on

- Is the dirt sieve at the tap end of the inlet hose clogged?
- Is the sieve clogged at the machine end of the hose?

The suds are not pumped away or unusual noises occur during pumping

- Is the drain hose connected up as described in the Installation Instructions?
- Is the filter clogged or the impeller on the drain pump blocked by dirt or fluff (error display "P")?

Figures ⑧ – ⑬

Detergent is left in the dispenser

- Are you using dry detergent with no lumps?

Softener/starch is left in the dispenser or there is water left in the front compartment

- Check that the siphon is positioned correctly and clean. Check that the front compartment is clean.

There is a power failure while the machine is full of water and you want to take the washing out

Let the suds cool if necessary and then drain off via the emergency drain hose (see "Emergency draining").

The machine moves during spinning

Check that the machine is standing firmly on all four feet. If not, adjust the feet (see "Installation Instructions").

The washing is not spin-dried at the end of a programme

Your machine is fitted with an imbalance monitoring system. If it registers an excessive imbalance at the start of a spin (in case of a small load or large items only, for example) then the machine stops automatically without running the final spin to avoid what could be expensive damage.

Waterstop is activated

- You will recognise when the waterstop has been activated by the fact that the water inlet is interrupted and a continuous pumping noise is to be heard (error display "A"). Switch off the machine and turn off the tap.

If an overflow has caused the waterstop to be activated you can drain off the water which has collected in the drain tray by tipping the machine forward slightly.

If the waterstop is activated again when you switch the machine back on, you need to contact Customer Service.

Motor protection

The motor is equipped with a thermal overload trip which cuts off the power to the motor if it gets too hot. The motor is switched on again automatically after approx. 20 minutes.

Noise

Thanks to its advanced drive technology, the noise your machine makes when spinning is different from the one you may be used to from older, conventional machines. The new drive system also gives your machine the following advantages:

- a gentle wash with gradual acceleration
- better load distribution during spinning
- less vibration during spinning

Breakdown – now what?

Our quality control and modern production methods ensure your appliance will function as it should. If a fault should occur, please check first that all the hints and advice given in these instructions have been followed. It could be just a minor fault that has caused the breakdown.

If you cannot locate the fault with the aid of these instructions, our Customer Services organization is at your disposal. Numbers to contact are given in your local yellow pages. If you cannot find the number, please contact your local Bauknecht dealer.

When you call our Customer Services please be sure to give your full address, telephone number and area code and the complete service number and model number of the appliance. The service number is edged in red and located on the inner edge of the door.

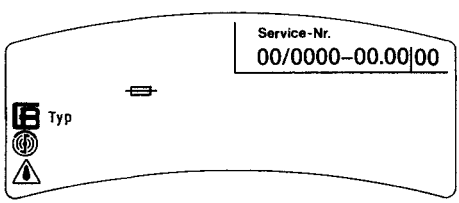

This number helps the service engineer to bring the right parts with him so that the appliance can be repaired on the first visit. It can also save you extra costs for his travelling time.